



Technik, die dem Menschen dient.

Operating instructions

REMOTE CONTROL CWL



Wolf GmbH D-84048 Mainburg Postbox 1380 Tel. +49(0)8751/74-0 Fax +49(0)8751/741600 Internet www.wolf-heiztechnik.de


Operation instructions Remote control for CWL 3062177

1. General description


The wireless remote control consists of a receiver and a transmitter (switch). The receiver is to be installed simply and fast. This wireless receiver is very good to combine with an existing switch. For example of a second switch in the bathroom.

2. Receiver

The receiver is supplied with to a modular cable with a RJ12/6 plug. This plug is put above into the black socket of the CWL appliance. On a receiver 32 transmitters are possible to be trained. Additional ones can be ordered with the Installateur.

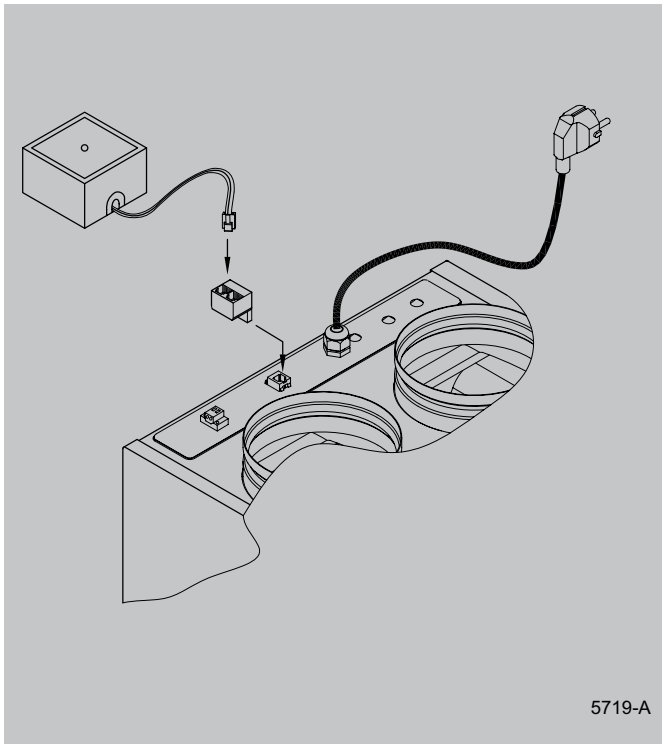

3. Transmitter with 4-positions

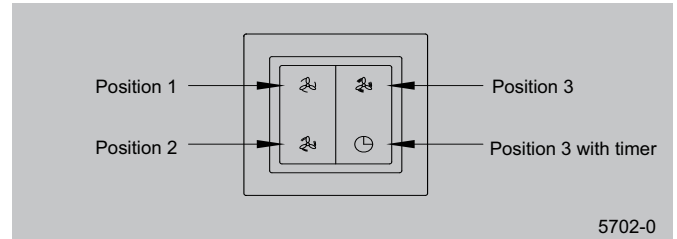

Key	Function
Press left above	Appliance turns in the stage 1.
Press left under	Appliance turns in the stage 2.
Press on the top right	Appliance turns in the stage 3.
Press right down briefly (<1 Sec)	Appliance turns 15 minutes in the stage 3 thereafter switches the equipment again to the stage 2.
Press right down for a long time (>1 Sec)	Appliance turns 30 minutes in the stage 3 thereafter switches the equipment again to the stage 2.

4 Combination multiple switch and wireless remote control

Possible two wireless remote controls is to be combined, but there is also the combination multiple switch and wireless remote control. Which switches and/or wireless remote appliance is current, is in the following indicated.

Wireless remote control	Wireless remote control	The last step is the current fan stage.
Multiple switch	Wireless remote control	The highest step is the current fan stage.